# **PXI**

NI PXI-1045 User Manual



# **Worldwide Technical Support and Product Information** ni.com **Worldwide Offices** Visit ni.com/niglobal to access the branch office Web sites, which provide up-to-date contact information, support phone numbers, email addresses, and current events. **National Instruments Corporate Headquarters** 11500 North Mopac Expressway Austin, Texas 78759-3504 USA Tel: 512 683 0100 For further support information, refer to the Technical Support and Professional Services appendix. To comment on National Instruments documentation, refer to the National Instruments Web site at ni.com/info and enter

the Info Code feedback.

© 2003–2011 National Instruments Corporation. All rights reserved.

# **Important Information**

#### Warranty

The NI PXI-1045 is warranted against defects in materials and workmanship for a period of one year from the date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace equipment that proves to be defective during the warranty period. This warranty includes parts and labor.

The media on which you receive National Instruments software are warranted not to fail to execute programming instructions, due to defects in materials and workmanship, for a period of 90 days from date of shipment, as evidenced by receipts or other documentation. National Instruments will, at its option, repair or replace software media that do not execute programming instructions if National Instruments receives notice of such defects during the warranty period. National Instruments does not warrant that the operation of the software shall be uninterrupted or error free.

A Return Material Authorization (RMA) number must be obtained from the factory and clearly marked on the outside of the package before any equipment will be accepted for warranty work. National Instruments will pay the shipping costs of returning to the owner parts which are covered by warranty.

National Instruments believes that the information in this document is accurate. The document has been carefully reviewed for technical accuracy. In the event that technical or typographical errors exist, National Instruments reserves the right to make changes to subsequent editions of this document without prior notice to holders of this edition. The reader should consult National Instruments if errors are suspected. In no event shall National Instruments be liable for any damages arising out of or related to this document or the information contained in it.

EXCEPT AS SPECIFIED HEREIN, NATIONAL INSTRUMENTS MAKES NO WARRANTIES, EXPRESS OR IMPLIED, AND SPECIFICALLY DISCLAIMS ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. CUSTOMER'S RIGHT TO RECOVER DAMAGES CAUSED BY FAULT OR NEGLIGENCE ON THE PART OF NATIONAL INSTRUMENTS SHALL BE ELIMITED TO THE AMOUNT THERETOFORE PAID BY THE CUSTOMER. NATIONAL INSTRUMENTS WILL NOT BE LIABLE FOR DAMAGES RESULTING FROM LOSS OF DATA, PROFITS, USE OF PRODUCTS, OR INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF. This limitation of the liability of National Instruments will apply regardless of the form of action, whether in contract or tort, including negligence. Any action against National Instruments must be brought within one year after the cause of action accrues. National Instruments shall not be liable for any delay in performance due to causes beyond its reasonable control. The warranty provided herein does not cover damages, defects, malfunctions, or service failures caused by owner's failure to follow the National Instruments installation, operation, or maintenance instructions; owner's modification of the product; owner's abuse, misuse, or negligent acts; and power failure or surges, fire, flood, accident, actions of third parties, or other events outside reasonable control.

#### Copyright

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, storing in an information retrieval system, or translating, in whole or in part, without the prior written consent of National Instruments Corporation.

National Instruments respects the intellectual property of others, and we ask our users to do the same. NI software is protected by copyright and other intellectual property laws. Where NI software may be used to reproduce software or other materials belonging to others, you may use NI software only to reproduce materials that you may reproduce in accordance with the terms of any applicable license or other legal restriction.

#### **Trademarks**

LabVIEW, National Instruments, NI, ni.com, the National Instruments corporate logo, and the Eagle logo are trademarks of National Instruments Corporation. Refer to the *Trademark Information* at ni.com/trademarks for other National Instruments trademarks.

Other product and company names mentioned herein are trademarks or trade names of their respective companies.

Members of the National Instruments Alliance Partner Program are business entities independent from National Instruments and have no agency, partnership, or joint-venture relationship with National Instruments.

#### **Patents**

For patents covering National Instruments products/technology, refer to the appropriate location: **Help»Patents** in your software, the patents.txt file on your media, or the *National Instruments Patent Notice* at ni.com/patents.

#### **Export Compliance Information**

Refer to the Export Compliance Information at ni.com/legal/export-compliance for the National Instruments global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data.

#### WARNING REGARDING USE OF NATIONAL INSTRUMENTS PRODUCTS

(1) NATIONAL INSTRUMENTS PRODUCTS ARE NOT DESIGNED WITH COMPONENTS AND TESTING FOR A LEVEL OF RELIABILITY SUTTABLE FOR USE IN OR IN CONNECTION WITH SURGICAL IMPLANTS OR AS CRITICAL COMPONENTS IN ANY LIFE SUPPORT SYSTEMS WHOSE FAILURE TO PERFORM CAN REASONABLY BE EXPECTED TO CAUSE SIGNIFICANT INJURY TO A HUMAN.

(2) IN ANY APPLICATION, INCLUDING THE ABOVE, RELIABILITY OF OPERATION OF THE SOFTWARE PRODUCTS CAN BE IMPAIRED BY ADVERSE FACTORS, INCLUDING BUT NOT LIMITED TO FLUCTUATIONS IN ELECTRICAL POWER SUPPLY, COMPUTER ARDWARE MALFUNCTIONS, COMPUTER OPERATING SYSTEM SOFTWARE FITNESS, FITNESS OF COMPILERS AND DEVELOPMENT SOFTWARE USED TO DEVELOP AN APPLICATION, INSTALLATION ERRORS, SOFTWARE AND HARDWARE COMPATIBILITY PROBLEMS, MALFUNCTIONS OR FAILURES OF ELECTRONIC MONITORING OR CONTROL DEVICES, TRANSIENT FAILURES OF ELECTRONIC SYSTEMS (HARDWARE AND/OR SOFTWARE), UNANTICIPATED USES OR MISUSES, OR ERRORS ON THE PART OF THE USER OR APPLICATIONS DESIGNER (ADVERSE FACTORS SUCH AS THESE ARE HEREAFTER COLLECTIVELY TERMED "SYSTEM FAILURES"). ANY APPLICATION WHERE A SYSTEM FAILURE WOULD CREATE A RISK OF HARM TO PROPERTY OR PERSONS (INCLUDING THE RISK OF BODILY INJURY AND DEATH), SHOULD NOT BE RELIANT SOLELY UPON ONE FORM OF ELECTRONIC SYSTEM DUE TO THE RISK OF SYSTEM FAILURE. TO AVOID DAMAGE, INJURY, OR DEATH, THE USER OR APPLICATION DESIGNER MUST TAKE REASONABLY PRUDENT STEPS TO PROTECT AGAINST SYSTEM FAILURES, INCLUDING BUT NOT LIMITED TO BACK-UP OR SHUT DOWN MECHANISMS. BECAUSE EACH END-USER SYSTEM FAILURES, INCLUDING BUT NOT LIMITED TO BACK-UP OR SHUT DOWN MECHANISMS. BECAUSE EACH END-USER SYSTEM IS CUSTOMIZED AND DIFFERS FROM NATIONAL INSTRUMENTS TESTING PLATFORMS AND BECAUSE A USER OR APPLICATION DESIGNER MAY USE NATIONAL INSTRUMENTS PRODUCTS IN COMBINATION WITH OTHER PRODUCTS IN A MANNER NOT EVALUATED OR CONTEMPLATED BY NATIONAL INSTRUMENTS, THE USER OR APPLICATION DESIGNER IS ULTIMATELY RESPONSIBLE FOR VERIFYING AND VALIDATING THE SUITABILITY OF NATIONAL INSTRUMENTS PRODUCTS WHENEVER NATIONAL INSTRUMENTS PRODUCTS ARE INCORPORATED IN A SYSTEM OR APPLICATION, INCLUDING, WITHOUT LIMITATION, THE APPROPRIATE DESIGN, PROCESS AND SAFETY LEVEL OF SUCH SYSTEM OR APPLICATION.

# **Contents**

Abo	out This Manual	
	Conventions	vii
	Related Documentation	
Cha	antor 1	
	apter 1	
Get	tting Started	
	Unpacking	1-1
	What You Need to Get Started	
	Key Features	
	Chassis Description	
	Optional Equipment	
	EMC Filler Panels	
	Rack Mount Kits	
	Slot Blockers	
	PXI-1045 Backplane Overview	
	Interoperability with CompactPCI	
	System Controller Slot	
	Star Trigger Slot	
	Peripheral Slots	
	Local Bus	
	Trigger Bus	
	System Reference Clock	
	.,	_
Cha	apter 2	
	-	
ınsı	tallation and Configuration	
	Safety Information	2-1
	Chassis Cooling Considerations	2-2
	Providing Adequate Clearance	2-2
	Setting Fan Speed	2-3
	Installing Filler Panels	2-3
	Installing Slot Blockers	2-3
	Rack Mounting	2-4
	Connecting Safety Ground	2-4
	Connecting to Power Source	2-4
	Installing a PXI Controller	
	Installing PXI Modules	
	Power Switch LED Indicator	
	Remote Voltage Monitoring and Control	2-9

1	10 MHz REF Rear Connectors	2-11
	10 MHz REF IN	2-11
	10 MHz REF OUT2	
F	PXI System Configuration with MAX2	
	Basic PXI System Configuration	
	Trigger Configuration in MAX	
т	PXI Trigger Bus Routing 2	
(	Using System Configuration and Initialization Files	C-14
Chapte	er 3	
Mainte	nance	
5	Service Interval	3-1
F	Preparation	3-1
(	Cleaning3	3-1
	Interior Cleaning	3-2
	Exterior Cleaning	
	Cleaning and Replacing the Fan Filters	
	Resetting the AC Mains Circuit Breaker	
F	Replacing the Modular Power Supply	
	Removal	
	Installation 3	
	Configuration 3	
	Connecting Safety Ground 3	
	Connecting to Power Source	)-3
Append	dix A	
	ications	
ороон.		
Append	dix B	
Pinouts	S	
Append	dix C	
• •	cal Support and Professional Services	
i GUIIIII	cai ouppoit and i ioicoolonal ociviceo	
Glossa	ry	
Index		

# **About This Manual**

The *NI PXI-1045 User Manual* contains information about installing, configuring, using, and maintaining the NI PXI-1045 18-slot chassis.



**Note** This manual applies to chassis assemblies 189105E-01 and later. For earlier chassis revisions, refer to ni.com/support.

### **Conventions**

The following conventions appear in this manual:

The » symbol leads you through nested menu items and dialog box options to a final action. The sequence **Options**»**Settings**»**General** directs you to pull down the **Options** menu, select the **Settings** item, and select **General** 

from the last dialog box.

This icon denotes a note, which alerts you to important information.

This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on a product, refer to the *Safety* section in Appendix A, *Specifications*, for information about precautions to take.

Bold text denotes items that you must select or click in the software, such as menu items and dialog box options. Bold text also denotes parameter

names.

Italic text denotes variables, emphasis, a cross-reference, or an introduction to a key concept. Italic text also denotes text that is a placeholder for a word

or value that you must supply.

Text in this font denotes text or characters that you should enter from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories, programs, subprograms, subroutines, device names, functions, operations,

variables, filenames, and extensions.

bold

italic

monospace

# **Related Documentation**

The following documents contain information that you might find helpful as you read this manual:

- CompactPCI Specification PICMG 2.0 R 3.0
- PXI Hardware Specification, Revision 2.2
- PXI Software Specification, Revision 2.2
- IEEE 1101.1-1991, IEEE Standard for Mechanical Core Specifications for Microcomputers Using IEC 603-2 Connectors
- IEEE 1101.10, IEEE Standard for Additional Mechanical Specifications for Microcomputers Using IEEE 1101.1 Equipment Practice

**Getting Started** 

1

This chapter describes the key features of the PXI-1045 chassis and lists the kit contents and optional equipment you can order from National Instruments.

# **Unpacking**

Carefully inspect the shipping container and the chassis for damage. Check for visible damage to the metal work. Check to make sure all handles, hardware, and switches are undamaged. Inspect the inner chassis for any possible damage, debris, or detached components. If damage appears to have been caused during shipment, file a claim with the carrier. Retain the packing material for possible inspection and/or reshipment.

### What You Need to Get Started

I ne	e PXI-1045 Kit contains the following items:
	PXI-1045 chassis
	Filler panels
	AC power cable (refer to Table 1-1 for AC power cables)
	NI PXI-1045 User Manual
	Read Me First: Safety and Electromagnetic Compatibility
	Driver CD-ROM containing NI PXI chassis software
$\Box$	Chassis number labels

Power Cable Reference Standards

Standard 120 V (USA) ANSI C73.11/NEMA 5-15-P/IEC83

Switzerland 220 V SEV

Australia 240 V AS C112

Universal Euro 230 V CEE (7), II, IV, VII IEC83

North America 120 V ANSI C73.20/NEMA 5-15-P/IEC83

United Kingdom 230 V BS 1363/IEC83

Table 1-1. AC Power Cables

If you are missing any of the above items, or if you have the incorrect AC power cable, contact National Instruments.

# **Key Features**

The PXI-1045 combines a high-performance 18-slot PXI backplane with a high-output power supply and a structural design that has been optimized for maximum usability in a wide range of applications. The chassis' modular design ensures a high level of maintainability, resulting in a very low mean time to repair (MTTR). The PXI-1045 complies with the *PXI Hardware Specification*, *Revision 2.1*, offering advanced timing and synchronization features.


The key features of the PXI-1045 include the following:

- PXI and CompactPCI (PICMG 2.0 R 3.0) module compatibility
- 3U-sized, 18-slot chassis
- Universal AC input: automatic voltage and frequency ranging
- Over-current protection through push-reset circuit breaker (no AC-input fuses to replace)
- Removable modular power-supply shuttle
- Remote voltage monitoring and inhibit through a rear-panel connector
- On/Off (Standby) power switch on the front panel for easy access
- Temperature-sensing module that can adjust fan speed based on air-intake temperature to minimize audible noise

- Front-panel LED that can indicate power supply failure
- 10 MHz REF IN and OUT BNC connectors for synchronizing multiple chassis using PXI\_CLK10
- Programmable PXI trigger routing between PXI bus segments
- Carrying handle for portability
- Tilt feet for bench-top applications
- Rack mountable

# **Chassis Description**


Figures 1-1 and 1-2 show the key features of the PXI-1045 chassis front and rear panels. Figure 1-1 shows the front view of the PXI-1045. Figure 1-2 shows the rear view.

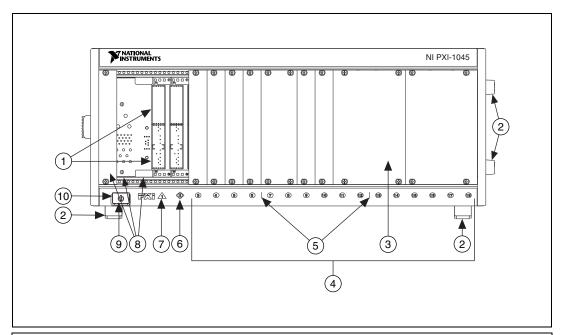

- 1 Backplane Connectors (Located in slots 1–18)
- 2 Removable Feet
- 3 Filler Panel
- 4 Generic Peripheral Slots
  - PXI Bus Segment Dividers

- 6 Star Trigger/Peripheral Slot
- 7 System Controller Slot
- 8 Controller Expansion Slots
- 9 Power Switch LED
- 10 On/Off (Standby) Power Switch

Figure 1-1. Front View of the PXI-1045 Chassis

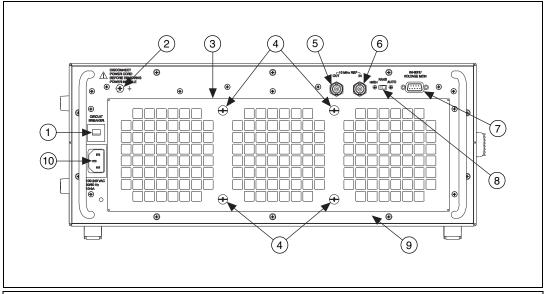

- Circuit Breaker
- 2 Chassis Ground Screw
- 3 Filter Cover
- 4 Filter Retainer Screws
- 5 10 MHz REF OUT BNC
- 6 10 MHz REF IN BNC
- 7 Remote Inhibit and Voltage Monitoring Connector
- 8 Fan Speed Selector Switch
- Power-Supply Shuttle
- 10 Universal AC Inlet

Figure 1-2. Rear View of the PXI-1045 Chassis

# **Optional Equipment**

Contact National Instruments to order the following options for the PXI-1045 chassis.

#### **EMC Filler Panels**

Optional EMC filler panel kits are available from National Instruments.

#### **Rack Mount Kits**

Two rack mount kit options are available for mounting the PXI-1045 chassis into a 19 in. instrument cabinet.

#### **Slot Blockers**

Optional slot blocker kits are available from National Instruments for improved thermal performance when all slots are not used.

# **PXI-1045 Backplane Overview**

#### Interoperability with CompactPCI

The PXI-1045 backplane is interoperable with 5 V and universal PXI-compatible products and standard CompactPCI products. This is an important feature, because some PXI systems may require components that do not implement PXI-specific features. For example, you may want to use a standard CompactPCI network interface card in a PXI chassis.

The signals on the backplane P1 connectors meet the requirements of the CompactPCI specification for both peripheral and system modules. Refer to Appendix B, *Pinouts*, for pinout information.

The PXI-specific signals are on the backplane P2 connectors and are found only on those signal lines reserved or not used in the CompactPCI 64-bit specification. Therefore, all modules that meet the requirements of the CompactPCI 64-bit specification will function in the PXI-1045. Refer to Appendix B, *Pinouts*, for pinout information.

The PXI-1045 has three PXI bus segments linked through two 32-bit/33 MHz PXI bridges. The PXI bus segment divisions are represented on the front of the chassis by vertical lines as shown in Figure 1-1.



**Note** The PXI-1045 backplane is 32-bit PCI; 64-bit CompactPCI cards will operate in 32-bit mode in this chassis.

The PXI-1045 backplane has +5 V V(I/O). Refer to the *CompactPCI Specification PICMG 2.0 R3.0* for details regarding V(I/O).

#### System Controller Slot

The system controller slot is slot 1 of the chassis as defined by the PXI Specification. It has three controller expansion slots for system controller modules that are wider than one slot. As defined in the PXI specification, these slots allow the controller to expand to the left to prevent the controller from using peripheral slots.

#### **Star Trigger Slot**

The star trigger (ST) slot is slot 2. This slot has dedicated equal-length trigger lines between slot 2 and peripheral slots 3 through 15 (refer to Figure 1-3). The PXI Specification defines only 13 star trigger lines; therefore, the last three slots do not receive a star trigger. Slot 2 is intended for modules with ST functionality that can provide individual triggers to all other peripheral modules. However, if you do not require advanced trigger functionality, you can install any standard peripheral module in this slot.

The star trigger slot can also be used to provide a PXI\_CLK10 signal to the backplane. For more information regarding PXI\_CLK10, refer to the *System Reference Clock* section.

#### **Peripheral Slots**

There are 17 peripheral slots including the star trigger slot.

#### **Local Bus**

The PXI backplane local bus is a daisy-chained bus that connects each peripheral slot with adjacent peripheral slots to the left and right (refer to Figure 1-3). For example, slot 2's right local bus connects to slot 3's left local bus, and so on.

The left local bus signal lines on slot 2 are used for star trigger and do not connect to slot 1. The right local bus signal lines on slot 18 are not routed anywhere.

Each local bus is 13 lines wide and can pass analog signals up to 42 V between cards or provide a high-speed TTL side-band digital communication path that does not reduce the PXI bus bandwidth.

Initialization software uses the configuration information specific to adjacent peripheral modules to evaluate local bus compatibility.

NI PXI-1045 User Manual

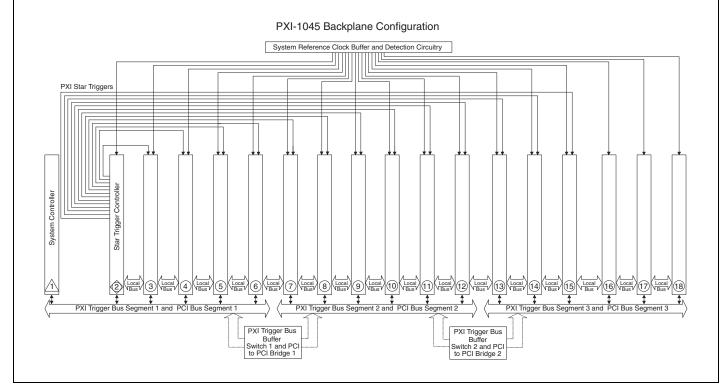


Figure 1-3. PXI CLK\_10 and Star Trigger Routing

### **Trigger Bus**

All slots on each PXI bus segment share eight PXI trigger lines. You can use these trigger lines in a variety of ways. For example, you can use triggers to synchronize the operation of several different PXI peripheral modules. In other applications, one module located in slot 2 can control carefully timed sequences of operations performed on other modules in the system. Modules can pass triggers to one another, allowing precisely timed responses to asynchronous external events the system is monitoring or controlling.

The PXI trigger lines from adjacent PXI trigger bus segments can be routed in either direction across the PXI bridges through buffers. This allows you to send trigger signals to, and receive trigger signals from, every slot in the chassis. Static trigger routing (user-specified line and directional assignments) can be configured through Measurement & Automation Explorer (MAX). Dynamic routing of triggers (automatic line assignments) is supported through certain National Instruments drivers like NI-DAQmx.



**Note** Although any trigger line may be routed in either direction, it cannot be routed in more than one direction at a time.

#### **System Reference Clock**

The PXI-1045 supplies the PXI 10 MHz system clock signal (PXI\_CLK10) independently to each peripheral slot. An independent buffer (having a source impedance matched to the backplane and a skew of less than 250 ps between slots) drives the clock signal to each peripheral slot. You can use this common reference clock signal to synchronize multiple modules in a measurement or control system. You can drive PXI CLK10 from an external source through the PXI\_CLK10\_IN pin on the P2 connector of the star trigger slot. Refer to Table B-4, P2 (J2) Connector Pinout for the Star *Trigger Slot.* Sourcing an external clock on this pin automatically overrides the backplane's 10 MHz source. You also can drive PXI\_CLK10 from the 10 MHz REF IN BNC connector on the rear of the chassis (refer to Figure 1-2). Sourcing an external clock on this connector automatically overrides the backplane's 10 MHz clock. If the clock signal is present on both the PXI\_CLK10\_IN pin of the star trigger slot and the 10 MHz REF IN connector on the rear of the chassis, the signal on the star trigger slot is selected and provided to all peripheral slots and the external 10 MHz REF OUT connector on the rear of the chassis.

# **Installation and Configuration**

This chapter describes how to install, configure, and use the PXI-1045 chassis.

Before connecting the chassis to a power source, read this chapter and the *Read Me First: Safety and Electromagnetic Compatibility* document included with your chassis.

# **Safety Information**



**Caution** Before undertaking any troubleshooting, maintenance, or exploratory procedure, carefully read the following caution notices.

This equipment contains voltage hazardous to human life and safety, and is capable of inflicting personal injury.

- Chassis Grounding—The PXI-1045 requires a connection from the
  premise wire safety ground to the PXI-1045 chassis ground. The earth
  safety ground *must* be connected during use of this equipment to
  minimize shock hazards. Refer to the *Connecting Safety Ground*section for instructions on connecting safety ground.
- Live Circuits—Operating personnel and service personnel *must* not remove protective covers when operating or servicing the PXI-1045. Adjustments and service to internal components must be undertaken by qualified service technicians. During service of this product, the mains connector to the premise wiring must be disconnected. Dangerous voltages may be present under certain conditions; use extreme caution.
- **Explosive Atmosphere**—Do *not* operate the chassis in conditions where flammable gases are present. Under such conditions this equipment is unsafe and may ignite the gases or gas fumes.
- Part Replacement—Only service this equipment with parts that are exact replacements, both electrically and mechanically. Contact National Instruments for replacement part information. Installation of

parts with those that are not direct replacements may cause harm to personnel operating the chassis. Furthermore, damage or fire may occur if replacement parts are unsuitable.

• **Modification**—Do *not* modify any part of the chassis from its original condition. Unsuitable modifications may result in safety hazards.

# **Chassis Cooling Considerations**

The PXI-1045 is designed to operate on a bench or in an instrument rack. Determine how you want to use the PXI-1045 and follow the appropriate installation instructions.

#### **Providing Adequate Clearance**

Apertures in the top and along both sides of the chassis facilitate power supply and module cooling. Air enters through filters and fan inlets in the lower rear of the chassis and exits through the upper sections on both sides and through the top, as shown in Figure 2-1. Place the PXI-1045 on a bench top or in an instrument rack so that the fans (air inlets) and the air outlet apertures along both sides and the top of the chassis have adequate ventilation. Keep other equipment a minimum of 76.2 mm (3 in.) away from the air inlets on the rear of the chassis.

When rack mounting the PXI-1045, provide at least 44.5 mm (1.75 in.) clearance above and on the sides of the unit for adequate venting. High-power applications may require additional clearance.

1 Air Outlets 2 Air Intake

Install the chassis so that you can easily access the rear panel. This simplifies replacing the air filters or power supply shuttle, if necessary.

Figure 2-1. PXI-1045 Chassis Airflow Side View

### **Setting Fan Speed**

The fan-speed selector switch is on the rear panel of the PXI-1045. Refer to Figure 1-2, *Rear View of the PXI-1045 Chassis*, to locate the fan-speed selector switch. Select HIGH for maximum cooling performance (recommended) or AUTO for quieter operation. When set to AUTO, the fan speed is determined by chassis intake air temperature.

#### **Installing Filler Panels**

To improve module cooling performance, install filler panels (provided with the chassis) in unused or empty slots. Secure with the captive mounting screws provided.

### **Installing Slot Blockers**

The cooling performance of the chassis can be improved by installing optional slot blockers. Visit ni.com/support to read the National Instruments KnowledgeBase article 2S4928ON, *PXI Slot Blockers and Improved PXI System Cooling Performance*, for more details.

# **Rack Mounting**

Rack-mount applications require the optional rack-mount kits available from National Instruments. Refer to Figure A-3, *PXI-1045 Rack Mount Kit Components*, and the instructions supplied with the rack-mount kits to install your PXI-1045 in an instrument rack.



**Note** You may want to remove the feet from the PXI-1045 when rack mounting. To do so, remove the screws holding the feet in place.

# **Connecting Safety Ground**



**Caution** The PXI-1045 chassis is designed with a three-position NEMA 5-15 style plug for the U.S. that connects the ground line to the chassis ground. To minimize shock hazard, make sure the electrical power outlet you use to power the chassis has an appropriate earth safety ground.

If your power outlet does not have an appropriate ground connection, you must connect the premise safety ground to the chassis grounding screw located on the rear panel. Refer to Figure 1-2, *Rear View of the PXI-1045 Chassis*, to locate the chassis grounding screw. Complete the following steps to connect the safety ground.

- 1. Connect a 16 AWG (1.3 mm) wire to the chassis grounding screw using a grounding lug. The wire must have green insulation with a yellow stripe or must be noninsulated (bare).
- 2. Attach the opposite end of the wire to permanent earth ground using toothed washers or a toothed lug.

# **Connecting to Power Source**



**Caution** Do *not* install modules prior to performing the following power-on test.

Attach input power through the rear AC inlet using the appropriate AC power cable supplied. Refer to Figure 1-2, *Rear View of the PXI-1045 Chassis*, to locate the AC inlet.



**Caution** To completely remove power, you *must* disconnect the AC power cable.

The power switch allows you to power on the chassis or place it in standby mode. Push the power switch to the On (recessed) position (if not already on). Observe that all fans become operational and the power switch LED is a steady green.

# **Installing a PXI Controller**


This section contains general instructions for installing a PXI controller in the PXI-1045 chassis. Refer to your PXI controller user manual for specific instructions and cautions. Complete the following steps to install a controller.

1. Plug in the PXI chassis before installing the controller. The power cord grounds the chassis and protects it from electrical damage while you install the controller. Make sure the chassis power switch is in the Off (Standby) position.



**Caution** To protect both yourself and the chassis from electrical hazards, leave the chassis off until you finish installing the controller.

2. Install the controller into the system controller slot (slot 1, indicated by the red card guides) by first placing the controller edges into the front controller guides (top and bottom). Slide the controller to the rear of the chassis (making sure that the injector/ejector handle is pushed down as shown in Figure 2-2).

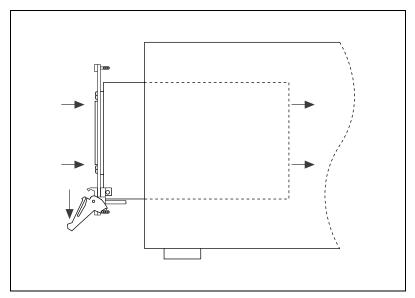

**Figure 2-2.** Injector/Ejector Handle Position during Controller or Peripheral Module Insertion

- When you begin to feel resistance, push up on the injector/ejector handle to inject the controller fully into the chassis frame. Secure the controller front panel to the chassis using the controller front-panel mounting screws.
- 4. Connect the keyboard, mouse, and monitor to the appropriate connectors. Connect devices to ports as required by your system configuration.
- 5. Power on the chassis. Verify that the controller boots. If the controller does not boot, refer to your controller user manual.

Figure 2-3 shows a PXI controller installed in the system controller slot of a PXI-1045 chassis. You can place CompactPCI or PXI modules in any other slot.

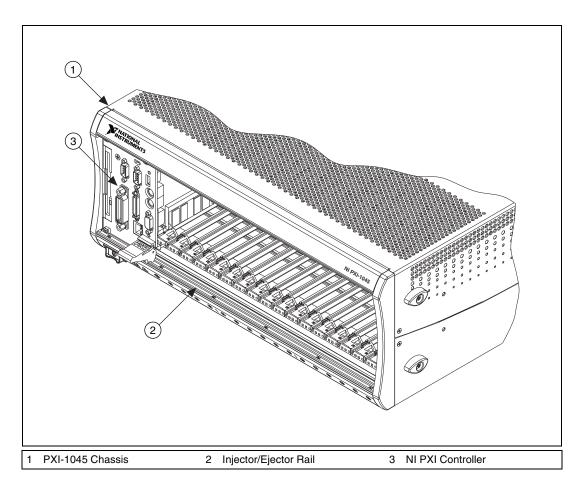


Figure 2-3. NI PXI Controller Installed in a PXI-1045 Chassis

# **Installing PXI Modules**

Complete the following steps to install a module.

- 1. Make sure the power switch is in the Off (Standby) position.
- 2. Install a module into a chassis slot by first placing the module card edges into the front module guides (top and bottom), as shown in Figure 2-4. Slide the module to the rear of the chassis, making sure that the injector/ejector handle is pushed down as shown in Figure 2-2.
- When you begin to feel resistance, push up on the injector/ejector handle to fully inject the module into the chassis frame. Secure the module front panel to the chassis using the module front-panel mounting screws.

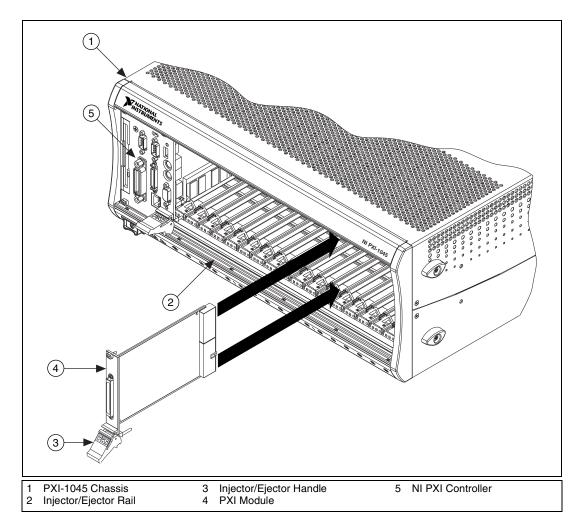


Figure 2-4. Installing PXI or CompactPCI Modules

### **Power Switch LED Indicator**

The chassis power switch has an integrated LED. This LED indicates one of three different conditions:

• If the power switch LED is steady green (not flashing), the chassis is powered on and operating normally.



**Caution** Operating the PXI system outside of the specified temperature range may result in loss of data, reduction of chassis life, or damage to equipment.

• If the power switch LED is flashing green, the air-intake temperature has exceeded the chassis operating range.



**Caution** Power supply output voltages out of regulation may result in equipment malfunction, incorrect data, or failure of system to boot.

• If the power switch LED is flashing red, the power supply outputs are not within voltage regulation requirements.

# **Remote Voltage Monitoring and Control**

The PXI-1045 chassis supports remote voltage monitoring and inhibiting through a male 9-pin D-sub connector located on the rear panel. Table 2-1 shows the pinout of the 9-pin D-sub connector.

**Table 2-1.** Remote Inhibit and Voltage Monitoring Connector Pinout

D-sub Pin	Signal	
1	Logic Ground	
2	+5 VDC	
3	Reserved	
4	+3.3 VDC	
5	Inhibit (Active Low)	
6	+12 VDC	
7	Reserved	
8	-12 VDC	
9	Logic Ground	
6 7 8 9 0 0 0 0 1 2 3 4 5		

You can use the Inhibit signal (active low) to power off the chassis. To remotely power off the chassis, connect the Inhibit pin (pin 5) to a Logic Ground pin (pin 1 or 9). As long as this connection exists, the chassis will remain off (standby); when you remove this connection, the chassis turns on.



**Note** For the Inhibit signal to control the On/Off (Standby) state of the chassis, the front power switch must be in the On (recessed) position.



**Caution** When connecting digital voltmeter probes to the rear 9-pin D-sub connector, be careful not to short the probe leads together. Doing so could damage the power supply.



**Caution** Use the rear-panel 9-pin D-sub connector to check voltages only. Do *not* use the connector to supply power to external devices, or damage to the chassis may result.

You can use a digital voltmeter to ensure all voltage levels in the PXI-1045 are within the allowable limits. Referring to Table 2-2, connect one lead of the voltmeter to a supply pin on the remote power monitoring connector (9-pin D-sub) on the rear panel. Refer to Table 2-1 for a pinout diagram of the remote voltage monitoring connector. Connect the reference lead of the voltmeter to one of the ground pins. Compare each voltage reading to the values listed in Table 2-2.

Pin Supply Acceptable Voltage Range 2 +5 V 4.75 to 5.25 V 3.135 to 3.465 V 4 +3.3 V6 +12 V 11.4 to 12.6 V 8 -12 V -12.6 to -11.4 V 0 V 1, 9 Logic Ground

Table 2-2. Power Supply Voltages at Voltage Monitoring Connector

If the voltages fall within the specified ranges, the chassis complies with the CompactPCI voltage-limit specifications.

### 10 MHz REF Rear Connectors

There are two BNC connectors on the rear of the PXI-1045 chassis designated 10 MHz REF. The connectors are labeled IN and OUT. You can use them for supplying the backplane with a 10 MHz reference clock or routing the backplane's PXI\_CLK10 signal to another chassis.

#### 10 MHz REF IN

You can use the 10 MHz REF IN connector to supply an external 10 MHz clock to the backplane PXI\_CLK10. This external clock signal will be buffered and provided to each peripheral slot's PXI\_CLK10 pin with a maximum slot-to-slot skew of 250 ps. When the backplane detects a 10 MHz signal on the 10 MHz REF IN connector, it automatically overrides the 10 MHz clock provided by the backplane and uses the externally provided clock. If the backplane detects a 10 MHz clock on the PXI\_CLK10\_IN pin of slot 2 and a 10 MHz clock on the 10 MHz REF IN connector, the backplane automatically selects the signal from slot 2 and provides that signal to each peripheral slot.

The input impedance of the 10 MHz REF IN connector on the rear of the chassis is 50  $\Omega$  ± 5  $\Omega$ . The backplane accepts a 10 MHz clock signal between 200 mV $_{pp}$  and 5 V $_{pp}$  and rejects any DC component of the 10 MHz REF IN signal. The input signal may be a 10 MHz square wave or sine wave.

#### 10 MHz REF OUT

The 10 MHz REF OUT connector provides a buffered non-TTL version of the PXI\_CLK10 TTL signal supplied to the peripheral slots on the backplane. You can use this signal to synchronize multiple PXI chassis to the same PXI\_CLK10 signal.

The output impedance of this connector is 50  $\Omega$  ± 5  $\Omega$ . The output signal is a 1  $V_{pp}$  ±20% non-TTL square wave.

# **PXI System Configuration with MAX**

Configuration of the PXI system is handled through Measurement & Automation Explorer (MAX), included on the NI Driver CD-ROM packaged with your kit. MAX creates the pxisys.ini file which defines the layout and parameters of your PXI system. After installing the software on the NI Driver CD-ROM, the MAX icon will be present on the desktop.

The configuration steps for single- or multiple-chassis systems are the same.

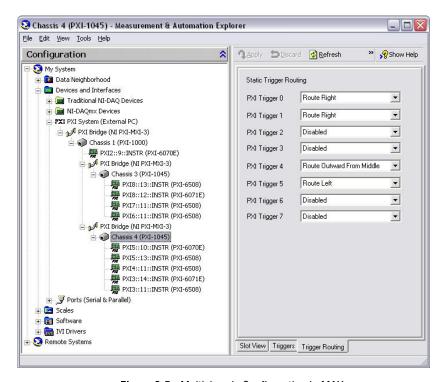


Figure 2-5. Multichassis Configuration in MAX

#### **Basic PXI System Configuration**

- 1. Launch MAX.
- 2. In the **Configuration** tree, click on the **Devices and Interfaces** branch to expand it.
- 3. If the PXI system controller has not yet been configured, it will be labeled "PXI System (Unidentified)." Right-click on this entry to display the popup menu, then select the appropriate controller model from the **Identify As** submenu.
- 4. Click on the PXI System controller and the chassis (or multiple chassis, in a multi-chassis configuration) will be listed below it. Identify each chassis by right-clicking on its entry, then selecting the appropriate chassis model through the Identify As submenu. Further expanding the PXI System branch will show all of the devices in the system that can be recognized by NI-VISA. Once your controller and

- all of your chassis have been identified, the required pxisys.ini file will be complete.
- 5. Apply the chassis number labels (shown in Figure 2-6) included with your kit to each chassis in your PXI system, and write in the chassis number accordingly in the white space.




Figure 2-6. Chassis Number Label

#### **Trigger Configuration in MAX**

Each chassis has one or more trigger buses, each with eight lines numbered 0 through 7 that can be reserved and routed statically or dynamically. Static reservation "pre-allocates" a trigger line to prevent its configuration by a user program. Dynamic reservation/routing/deallocation is "on the fly" within a user program based upon National Instruments APIs such as NI-DAQmx. Static reservation of trigger lines can be implemented by the user in MAX through the **Triggers** tab. Reserved trigger lines will not be used by PXI modules dynamically configured by programs such as NI-DAQmx. This prevents the instruments from double-driving the trigger lines, possibly damaging devices in the chassis. In the default configuration, trigger lines on each bus are independent. For example, if trigger line 3 is asserted on trigger bus 0, by default it will not be automatically asserted on any other trigger bus.

Complete the following steps to reserve these trigger lines in MAX.

- 1. In the **Configuration** tree, click on the PXI chassis branch you want to configure.
- 2. Then, in the right-hand pane, toward the bottom, click on the **Triggers** tab.
- 3. Select which trigger lines you would like to statically reserve.
- 4. Click the **Apply** button.

### **PXI Trigger Bus Routing**

Some National Instruments chassis, such as the PXI-1006 and the PXI-1045, have the capability to route triggers from one bus to others within the same chassis using the **Trigger Routing** tab in MAX, as shown in Figure 2-5. This tab allows the routing of triggers from any single trigger bus to all of the other trigger buses in the chassis.



**Note** Selecting any non-disabled routing automatically reserves the line in all trigger buses being routed to. If you are using NI-DAQmx, it will reserve and route trigger lines for you, so you won't have to route trigger lines manually.

Complete the following steps to configure trigger routings in MAX.

- 1. In the **Configuration** tree, select the chassis in which you want to route trigger lines.
- 2. In the right-hand pane, select the **Trigger Routing** tab near the bottom.
- For each trigger line, select Route Right, Route Outward From Middle, or Route Left to route triggers on that line in the described direction, or select Disabled for the default behavior with no manual routing.
- 4. Click the **Apply** button.

# **Using System Configuration and Initialization Files**

The PXI specification allows many combinations of PXI chassis and system modules. To assist system integrators, the manufacturers of PXI chassis and system modules must document the capabilities of their products. The minimum documentation requirements are contained in .ini files, which consist of ASCII text. System integrators, configuration utilities, and device drivers can use these .ini files.

The capability documentation for the PXI-1045 chassis is contained in the chassis.ini file on the software media that comes with the chassis. The information in this file is combined with information about the system controller to create a single system initialization file called pxisys.ini (PXI System Initialization). The system controller manufacturer either provides a pxisys.ini file for the particular chassis model that contains the system controller or provides a utility that can read an arbitrary chassis.ini file and generate the corresponding pxisys.ini file. System controllers from National Instruments use the Measurement & Automation Explorer (MAX) to generate the pxisys.ini file from the chassis.ini file.

Device drivers and other utility software read the pxisys.ini file to obtain system information. Device drivers should have no need to directly read the chassis.ini file. For detailed information regarding initialization files, refer to the PXI specification at www.pxisa.org.

# **Maintenance**

This chapter describes basic maintenance procedures you can perform on the PXI-1045 chassis.



**Caution** Disconnect the power cable prior to servicing the PXI-1045 chassis.

### **Service Interval**

Clean the chassis fan filters at a maximum interval of six months. Depending on the amount of use and ambient dust levels in the operating environment, the filters may require more frequent cleaning.

Clean dust from the chassis exterior (and interior) as needed, based on the operating environment. Periodic cleaning increases reliability.

# **Preparation**

The information in this chapter is designed for use by qualified service personnel. Read the *Read Me First: Safety and Electromagnetic Compatibility* document included with your kit before attempting any procedures in this chapter.



**Caution** Many components within the chassis are susceptible to static discharge damage. Service the chassis only in a static-free environment. Observe standard handling precautions for static-sensitive devices while servicing the chassis. Always wear a grounded wrist strap, or equivalent, while servicing the chassis.

# **Cleaning**



**Caution** Always disconnect the AC power cable before cleaning or servicing the chassis.

Cleaning procedures consist of exterior and interior cleaning of the chassis and cleaning the fan filters. Refer to your module user documentation for information on cleaning individual CompactPCI or PXI modules.

#### Interior Cleaning

Use a dry, low-velocity stream of air to clean the interior of the chassis. Use a soft-bristle brush for cleaning around components. If you must use a liquid for minor interior cleaning, use a 75% isopropyl alcohol solution and rinse with deionized water.

#### **Exterior Cleaning**



**Cautions** Avoid getting moisture inside the chassis during exterior cleaning, especially through the top vents. Use just enough moisture to dampen the cloth.

Do *not* wash the front- or rear-panel connectors or switches. Cover these components while cleaning the chassis.

Do *not* use harsh chemical cleaning agents; they may damage the chassis. Avoid chemicals that contain benzene, toluene, xylene, acetone, or similar solvents.

Clean the exterior surfaces of the chassis with a dry lint-free cloth or a soft-bristle brush. If any dirt remains, wipe with a cloth moistened in a mild soap solution. Remove any soap residue by wiping with a cloth moistened with clear water. Do *not* use abrasive compounds on any part of the chassis.

# **Cleaning and Replacing the Fan Filters**

Dirty fan filters can dramatically reduce the cooling performance of the PXI-1045 chassis. Clean the filters whenever they become visibly dirty. You can easily remove the chassis air filters from the rear of the chassis by removing the filter retainer. To remove the filter retainer, loosen the retainer screws. The filter cover and retainer are shown in Figure 1-2, *Rear View of the PXI-1045 Chassis*.

Clean the fan filters by washing them in a mild soap solution and then vacuuming or blowing air through them. Rinse the filters with water and allow them to dry before reinstalling them on the chassis.

If desired, you can replace the fan filters with part number FF 450-A/30P from Air Filtration Products, Inc., Tucson, AZ 85705.

The same filter media can be purchased in sheets, and a rectangular section of this material can be used instead of three separate filters.

# **Resetting the AC Mains Circuit Breaker**

If the PXI-1045 is connected to an AC source and encounters an over-current condition, the circuit breaker on the rear panel will trip to prevent damage to the chassis. Complete the following steps to reset the circuit breaker.

- 1. Set the front-panel power switch to the Off (nonrecessed) position.
- 2. Disconnect the AC power cable.
- 3. Depress the circuit breaker to reset it.
- 4. Reconnect the AC power cable.
- 5. Set the power switch to the On (recessed) position.

If the circuit breaker trips again, complete the following steps.

- 1. Press the front-panel power switch to the Off (nonrecessed) position.
- 2. Disconnect the AC power cable.
- 3. Remove all modules from the chassis.
- 4. Complete the procedure described in the *Connecting to Power Source* section of Chapter 2, *Installation and Configuration*. If the power switch LED is not a steady green, contact National Instruments.
- 5. Verify that the PXI-1045 can meet the power requirements of your CompactPCI or PXI modules. Overloading the chassis can cause the breaker to trip. Refer to Appendix A, *Specifications*.
- The over-current condition that caused the circuit breaker to trip may be due to a faulty CompactPCI or PXI module. Refer to the documentation supplied with the modules for troubleshooting information.

# **Replacing the Modular Power Supply**

This section describes how to remove, configure, and install the PXI-1045 power-supply shuttle.



**Caution** Disconnect the power cable prior to replacing the power supply shuttle.

Before connecting the power-supply shuttle to a power source, read this section and the *Read Me First: Safety and Electromagnetic Compatibility* document included with the kit.

#### Removal

The PXI-1045 power-supply shuttle is a replacement part for the PXI-1045 chassis. Before attempting to replace the power-supply shuttle, verify that there is adequate clearance behind the chassis. Set the power switch on the front panel to the Off (nonrecessed) position. Disconnect the power cable and any other cables from the power-supply shuttle on the rear of the chassis. Identify the 10 screws that attach the power-supply shuttle to the chassis. Refer to Figure 1-2, *Rear View of the PXI-1045 Chassis*, for the screw locations. Using a number 1 Phillips screwdriver, remove the screws. Pull on the two rear handles of the power-supply shuttle to remove it from the rear of the chassis.



**Note** The 10 power supply shuttle screws  $(4-40 \times 1/4 \text{ in.})$  are not explicitly identified in Figure 1-2, *Rear View of the PXI-1045 Chassis*, but it can be used as a visual reference. The appropriate screws are located along the outer edges of the chassis' rear panel. There are six screws evenly spaced along the top and bottom edges, and four screws evenly spaced along the left and right edges.

#### Installation

Ensure that there is no visible damage to the new power-supply shuttle. Verify that the housing and connector on the new power-supply shuttle have no foreign material inside. Remove the protective cap on the internal 10 MHz REF connector (this is the connector that mates with the chassis backplane, not the BNC connectors on the rear panel). Install the new power-supply shuttle into the opening on the rear of the chassis. Insert and tighten the 10 screws with a Phillips screwdriver (maximum torque of 5 in. lbs).

#### **Configuration**

The fan-speed selector switch is on the rear panel of the power-supply shuttle. Refer to Figure 1-2, *Rear View of the PXI-1045 Chassis*, to locate the fan-speed selector. Select HIGH for maximum cooling performance (recommended) or AUTO for quieter operation. When set to AUTO, air-intake temperature determines the fan speed.

### **Connecting Safety Ground**

Refer to the *Connecting Safety Ground* section of Chapter 2, *Installation and Configuration*.

# **Connecting to Power Source**

Refer to the *Connecting to Power Source* section of Chapter 2, *Installation and Configuration*.



# **Specifications**



**Caution** If the PXI-1045 chassis is used in a manner inconsistent with the instructions or specifications listed by National Instruments, the protective features of the chassis may be impaired.

This appendix contains specifications for the PXI-1045 chassis.

#### **Electrical**

### **AC** Input

Input voltage range	240 VAC
Operating voltage range <sup>1</sup> 90–2	64 VAC
Input frequency 50/60	) Hz
Operating frequency range <sup>1</sup> 47–6	3 Hz
Input current rating	A
Over-current protection	circuit breaker
Line regulation	
3.3 V<±19	6
5 V<±19	6
±12 V<=±19	6
Efficiency70%	minimum

<sup>&</sup>lt;sup>1</sup> The operating range is guaranteed by design.

#### **DC** Output

DC current capacity (I<sub>MP</sub>)

Voltage	0–55 °C
+3.3 V	40 A
+5 V	59 A
+12 V Peripheral slots	8.5 A
+12 V System slot	0.5 A
-12 V	4.5 A

#### Load regulation

Voltage	Load Regulation
+3.3 V	<5%
+12 V	<5%
+5 V	<5%
-12 V	<5%

#### Maximum ripple and noise (20 MHz bandwidth)

Voltage	Maximum Ripple and Noise
+3.3 V	$50 \text{ mV}_{pp}$
+12 V	$120 \text{ mV}_{pp}$
+5 V	50 mV <sub>pp</sub>
-12 V	$120~\mathrm{mV_{pp}}$

Over-voltage protection<sup>1</sup>

Power-supply shuttle MTTR...... Replacement in under 5 minutes

# **Chassis Cooling**

<sup>&</sup>lt;sup>1</sup> To reset over-voltage protection, remove the mains for 30 seconds and then power back up.

#### Power supply cooling

System	Forced air circulation through
•	integrated fan
Intake	Right side of chassis
Exhaust	Left side of chassis

## Safety

This product is designed to meet the requirements of the following standards of safety for information technology equipment:

- IEC 61010-1, EN 61010-1
- UL 61010-1, CSA 61010-1



**Note** For UL and other safety certifications, refer to the product label or the *Online Product Certification* section.

## **Electromagnetic Compatibility**

This product meets the requirements of the following EMC standards for electrical equipment for measurement, control, and laboratory use:

- EN 61326 (IEC 61326): Class A emissions; Basic immunity
- EN 55011 (CISPR 11): Group 1, Class A emissions
- AS/NZS CISPR 11: Group 1, Class A emissions
- FCC 47 CFR Part 15B: Class A emissions
- ICES-001: Class A emissions



**Note** For the standards applied to assess the EMC of this product, refer to the *Online Product Certification* section.



Note For EMC compliance, operate this device with shielded cabling.

# CE Compliance ( $\in$

This product meets the essential requirements of applicable European Directives as follows:

- 2006/95/EC; Low-Voltage Directive (safety)
- 2004/108/EC; Electromagnetic Compatibility Directive (EMC)

#### **Online Product Certification**

Refer to the product Declaration of Conformity (DoC) for additional regulatory compliance information. To obtain product certifications and the DoC for this product, visit ni.com/certification, search by model number or product line, and click the appropriate link in the Certification column.

## **Environmental Management**

NI is committed to designing and manufacturing products in an environmentally responsible manner. NI recognizes that eliminating certain hazardous substances from our products is beneficial to the environment and to NI customers.

For additional environmental information, refer to the *NI and the Environment* Web page at ni.com/environment. This page contains the environmental regulations and directives with which NI complies, as well as other environmental information not included in this document.

# Waste Electrical and Electronic Equipment (WEEE)



**EU Customers** At the end of the product life cycle, all products *must* be sent to a WEEE recycling center. For more information about WEEE recycling centers, National Instruments WEEE initiatives, and compliance with WEEE Directive 2002/96/EC on Waste and Electronic Equipment, visit ni.com/environment/weee.

#### 电子信息产品污染控制管理办法 (中国 RoHS)



中国客户 National Instruments 符合中国电子信息产品中限制使用某些有害物质指令 (RoHS)。 关于 National Instruments 中国 RoHS 合规性信息,请登录 ni.com/environment/rohs\_china。 (For information about China RoHS compliance, go to ni.com/environment/rohs\_china,)

#### **Environmental**

Operating temperature 0 to 55 °C
Storage temperature40 to 71 °C
Relative humidity
Operating 10 to 90% non condensing
Nonoperational (storage)5 to 95% non conducting

**Backplane** 

Shock Operational <sup>1, 2</sup> Nonoperational <sup>1, 2</sup>	
Operating location	
Random vibration Operational <sup>1, 3</sup> Nonoperational <sup>1, 3</sup>	5 to 500 Hz, $2.46 g_{RMS}$
Altitude	2,000 m
Installation Category	II
Pollution Degree	2
Size	3U-sized; one system slot (with three system expansion slots) and 17 peripheral slots. Compliant with IEEE 1101.10 mechanical packaging. PXI Hardware Specification, Revision 2.2 compliant. Accepts both PXI and CompactPCI (PICMG 2.0 R 3.0) 3U modules.
V(I/O) <sup>4</sup>	+5 V
Backplane bare-board material	UL 94 V-0 Recognized
Backplane connectors	Conforms to IEC 917 and

NI PXI-1045 User Manual

IEC 1076-4-101, and are

UL 94 V-0 rated

<sup>&</sup>lt;sup>1</sup> Ambient temperature 25 °C.

<sup>&</sup>lt;sup>2</sup> Tested in accordance with IEC-60068-2-27. Test profile developed in accordance with MIL-PRF-28800F.

<sup>&</sup>lt;sup>3</sup> Tested in accordance with IEC-60068-2-64. Nonoperating test profile developed in accordance with MIL-PRF-28800F and MIL-STD-810E Method 514.

 $<sup>^4</sup>$  V(I/O) is connected to the +5 V DC power plane, so the same specs apply to V(I/O) and +5 V.

# 10 MHz System Reference Clock (10 MHz REF)

Maximum clock skew between slots	250 ps
Built-in 10 MHz clock	
Accuracy	±25 ppm (guaranteed over the operating temperature range)
Maximum jitter	5 ps RMS in 10 Hz to 1 MHz range
External clock sources	
Connectors	BNC on rear of chassis (ground referenced) or slot 2 J2 (pin D17; refer to Table B-4, P2 (J2)  Connector Pinout for the Star  Trigger Slot)
Input frequency	10 MHz ±100 ppm or better
Input amplitude	
Rear connector	200 mV <sub>pp</sub> to 5 V <sub>pp</sub> , 10 MHz squarewave or sinewave
Slot 2	5 V or 3.3 V, 10 MHz TTL signal
Input impedance	$50 \Omega \pm 5 \Omega$ (rear connector)
Maximum jitter introduced	
by backplane circuitry	1 ps RMS in 10 Hz to 1 MHz range
External clock output	
Connector	BNC on rear of chassis
	(ground-referenced)
Output amplitude	1 $V_{pp}$ ±20% squarewave into 50 $\Omega$ 2 $V_{pp}$ into open circuit
Output impedance	50 Ω ±5 Ω

## Mechanical

Overall dimensions (standard ch	nassis)
Height	177 mm (6.97 in.)



**Note** 14.5 mm (0.57 in.) is added to height when feet are installed. When tilted with front feet extended on table top, height is increased approximately 52.8 mm (2.08 in.) in front and 14.8 mm (0.583 in.) in rear.

Width	.445.5 mm (17.54 in.)
Depth	.434.8 mm (17.12 in.)
Weight	.12.6 kg (27.8 lbs)
Chassis materials	.Sheet Aluminum (5052-H32,
	3003-H14, and 6061-T6),
	Extruded Aluminum (6060-T6),
	Cold Rolled Steel, PC-ABS,
	Santoprene, Nylon
Finish	Conductive Clear Iridite on Aluminum Clear Chromate Zinc Plating on Cold Rolled Steel Polyurethane Enamel

Figures A-1 and A-2 show the PXI-1045 dimensions. The holes shown are for the installation of the optional rack-mount kits as shown in Figure A-3. Notice that the front and rear rack mounting holes (size M4) are symmetrical.

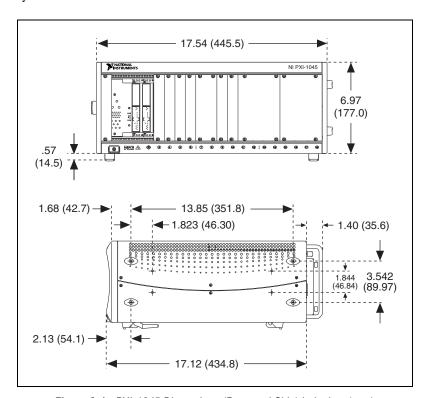


Figure A-1. PXI-1045 Dimensions (Front and Side) in Inches (mm)

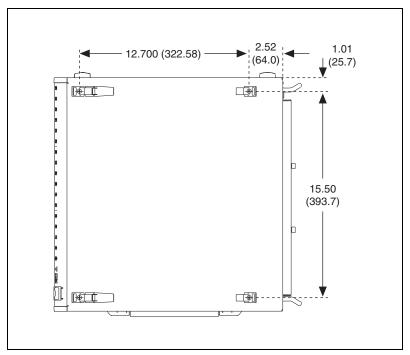


Figure A-2. PXI-1045 Dimensions (Bottom) in Inches (mm)

PXI-1045 Chassis

Figure A-3 shows the PXI-1045 rack-mount kit components.

Figure A-3. PXI-1045 Rack Mount Kit Components

3 Optional Rear Rack-Mount Kit

1 Front Rack Mount Kit

# **Pinouts**

This appendix describes the P1 and P2 connector pinouts for the PXI-1045 backplane.

Table B-1 shows the P1 (J1) connector pinout for the System Controller slot.

Table B-2 shows the P2 (J2) connector pinout for the System Controller slot.

Table B-3 shows the P1 (J1) connector pinout for the star trigger slot.

Table B-4 shows the P2 (J2) connector pinout for the star trigger slot.

Table B-5 shows the P1 (J1) connector pinout for the peripheral slots.

Table B-6 shows the P2 (J2) connector pinout for the peripheral slots.



**Note** PXI signals are shown in bold.

For more detailed information, refer to the *PXI Hardware Specification*, *Revision 2.2*. Contact the PXI Systems Alliance for a copy of the specification or visit www.pxisa.org.

Table B-1. P1 (J1) Connector Pinout for the System Controller Slot

Pin	Z	A	В	С	D	E	F
25	GND	5V	REQ64#	ENUM#	3.3V	5V	GND
24	GND	AD[1]	5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	3.3V	AD[4]	AD[3]	5V	AD[2]	GND
22	GND	AD[7]	GND	3.3V	AD[6]	AD[5]	GND
21	GND	3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	3.3V	PAR	C/BE[1]#	GND
17	GND	3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12–14				Key Area			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	GND	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ0#	GND	3.3V	CLK0	AD[31]	GND
5	GND	BRSVP1A5	BRSVP1B5	RST#	GND	GNT0#	GND
4	GND	IPMB_PWR	HEALTHY	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	5V	INTD#	GND
2	GND	TCK	5V	TMS	TDO	TDI	GND
1	GND	5V	-12V	TRST#	+12V	5V	GND

Table B-2. P2 (J2) Connector Pinout for the System Controller Slot

Pin	Z	A	В	С	D	E	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
21	GND	CLK6	GND	RSV	RSV	RSV	GND
20	GND	CLK5	GND	RSV	GND	RSV	GND
19	GND	GND	GND	SMB_SDA	SMB_SCL	SMB_ALERT#	GND
18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
17	GND	PXI_TRIG2	GND	PRST#	REQ6#	GNT6#	GND
16	GND	PXI_TRIG1	PXI_TRIG0	DEG#	GND	PXI_TRIG7	GND
15	GND	PXI_BRSVA15	GND	FAL#	REQ5#	GNT5#	GND
14	GND	BP(I/O)	BP(I/O)	BP(I/O)	GND	BP(I/O)	GND
13	GND	BP(I/O)	GND	V(I/O)	BP(I/O)	BP(I/O)	GND
12	GND	BP(I/O)	BP(I/O)	BP(I/O)	GND	BP(I/O)	GND
11	GND	BP(I/O)	GND	V(I/O)	BP(I/O)	BP(I/O)	GND
10	GND	BP(I/O)	BP(I/O)	BP(I/O)	GND	BP(I/O)	GND
9	GND	BP(I/O)	GND	V(I/O)	BP(I/O)	BP(I/O)	GND
8	GND	BP(I/O)	BP(I/O)	BP(I/O)	GND	BP(I/O)	GND
7	GND	BP(I/O)	GND	V(I/O)	BP(I/O)	BP(I/O)	GND
6	GND	BP(I/O)	BP(I/O)	BP(I/O)	GND	BP(I/O)	GND
5	GND	BP(I/O)	64EN#	V(I/O)	BP(I/O)	BP(I/O)	GND
4	GND	V(I/O)	PXI_BRSVB4	BP(I/O)	GND	BP(I/O)	GND
3	GND	CLK4	GND	GNT3#	REQ4#	GNT4#	GND
2	GND	CLK2	CLK3	SYSEN#	GNT2#	REQ3#	GND
1	GND	CLK1	GND	REQ1#	GNT1#	REQ2#	GND

Table B-3. P1 (J1) Connector Pinout for the Star Trigger Slot

Pin	Z	A	В	С	D	E	F
25	GND	5V	REQ64#	ENUM#	3.3V	5V	GND
24	GND	AD[1]	5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	3.3V	AD[4]	AD[3]	5V	AD[2]	GND
22	GND	AD[7]	GND	3.3V	AD[6]	AD[5]	GND
21	GND	3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	3.3V	PAR	C/BE[1]#	GND
17	GND	3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	3.3V	FRAME#	IRDY#	BD_SEL#	TRDY#	GND
12–14				Key Area			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	3.3V	CLK	AD[31]	GND
5	GND	BRSVP1A5	BRSVP1B5	RST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	5V	INTD#	GND
2	GND	TCK	5V	TMS	TDO	TDI	GND
1	GND	5V	-12V	TRST#	+12V	5V	GND

Table B-4. P2 (J2) Connector Pinout for the Star Trigger Slot

Pin	Z	A	В	С	D	E	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
21	GND	PXI_LBR0	RSV	PXI_LBR1	PXI_LBR2	PXI_LBR3	GND
20	GND	PXI_LBR4	PXI_LBR5	PXI_STAR0	GND	PXI_STAR1	GND
19	GND	PXI_STAR2	RSV	PXI_STAR3	PXI_STAR4	PXI_STAR5	GND
18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
17	GND	PXI_TRIG2	GND	RSV	PXI_CLK10_IN	PXI_CLK10	GND
16	GND	PXI_TRIG1	PXI_TRIG0	RSV	GND	PXI_TRIG7	GND
15	GND	PXI_BRSVA15	GND	RSV	PXI_STAR6	PXI_LBR6	GND
14	GND	RSV	RSV	RSV	GND	RSV	GND
13	GND	RSV	GND	V(I/O)	RSV	RSV	GND
12	GND	RSV	RSV	RSV	GND	RSV	GND
11	GND	RSV	GND	V(I/O)	RSV	RSV	GND
10	GND	RSV	RSV	RSV	GND	RSV	GND
9	GND	RSV	GND	V(I/O)	RSV	RSV	GND
8	GND	RSV	RSV	RSV	GND	RSV	GND
7	GND	RSV	GND	V(I/O)	RSV	RSV	GND
6	GND	RSV	RSV	RSV	GND	RSV	GND
5	GND	RSV	64EN#	V(I/O)	RSV	RSV	GND
4	GND	V(I/O)	PXI_BRSVB4	RSV	GND	RSV	GND
3	GND	PXI_LBR7	GND	PXI_LBR8	PXI_LBR9	PXI_LBR10	GND
2	GND	PXI_LBR11	PXI_LBR12	UNC	PXI_STAR7	PXI_STAR8	GND
1	GND	PXI_STAR9	GND	PXI_STAR10	PXI_STAR11	PXI_STAR12	GND

Table B-5. P1 (J1) Connector Pinout for the Generic Peripheral Slot

Pin	Z	A	В	С	D	E	F
25	GND	5V	REQ64#	ENUM#	3.3V	5V	GND
24	GND	AD[1]	5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	3.3V	AD[4]	AD[3]	5V	AD[2]	GND
22	GND	AD[7]	GND	3.3V	AD[6]	AD[5]	GND
21	GND	3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	3.3V	PAR	C/BE[1]#	GND
17	GND	3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	3.3V	FRAME#	IRDY#	BD_SEL#	TRDY#	GND
12–14				Key Area			
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ#	GND	3.3V	CLK	AD[31]	GND
5	GND	BRSVP1A5	BRSVP1B5	RST#	GND	GNT#	GND
4	GND	IPMB_PWR	HEALTHY	V(I/O)	INTP	INTS	GND
3	GND	INTA#	INTB#	INTC#	5V	INTD#	GND
2	GND	TCK	5V	TMS	TDO	TDI	GND
1	GND	5V	-12V	TRST#	+12V	5V	GND

Table B-6. P2 (J2) Connector Pinout for the Generic Peripheral Slot

Pin	Z	A	В	С	D	E	F
22	GND	GA4	GA3	GA2	GA1	GA0	GND
21	GND	PXI_LBR0	RSV	PXI_LBR1	PXI_LBR2	PXI_LBR3	GND
20	GND	PXI_LBR4	PXI_LBR5	PXI_LBL0	GND	PXI_LBL1	GND
19	GND	PXI_LBL2	RSV	PXI_LBL3	PXI_LBL4	PXI_LBL5	GND
18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
17	GND	PXI_TRIG2	GND	RSV	PXI_STAR	PXI_CLK10	GND
16	GND	PXI_TRIG1	PXI_TRIG0	RSV	GND	PXI_TRIG7	GND
15	GND	PXI_BRSVA15	GND	RSV	PXI_LBL6	PXI_LBR6	GND
14	GND	RSV	RSV	RSV	GND	RSV	GND
13	GND	RSV	GND	V(I/O)	RSV	RSV	GND
12	GND	RSV	RSV	RSV	GND	RSV	GND
11	GND	RSV	GND	V(I/O)	RSV	RSV	GND
10	GND	RSV	RSV	RSV	GND	RSV	GND
9	GND	RSV	GND	V(I/O)	RSV	RSV	GND
8	GND	RSV	RSV	RSV	GND	RSV	GND
7	GND	RSV	GND	V(I/O)	RSV	RSV	GND
6	GND	RSV	RSV	RSV	GND	RSV	GND
5	GND	RSV	64EN#	V(I/O)	RSV	RSV	GND
4	GND	V(I/O)	PXI_BRSVB4	RSV	GND	RSV	GND
3	GND	PXI_LBR7	GND	PXI_LBR8	PXI_LBR9	PXI_LBR10	GND
2	GND	PXI_LBR11	PXI_LBR12	UNC	PXI_LBL7	PXI_LBL8	GND
1	GND	PXI_LBL9	GND	PXI_LBL10	PXI_LBL11	PXI_LBL12	GND



# Technical Support and Professional Services

Visit the following sections of the award-winning National Instruments Web site at ni.com for technical support and professional services:

- **Support**—Technical support at ni.com/support includes the following resources:
  - Self-Help Technical Resources—For answers and solutions, visit ni.com/support for software drivers and updates, a searchable KnowledgeBase, product manuals, step-by-step troubleshooting wizards, thousands of example programs, tutorials, application notes, instrument drivers, and so on.
     Registered users also receive access to the NI Discussion Forums at ni.com/forums. NI Applications Engineers make sure every question submitted online receives an answer.
  - Standard Service Program Membership—This program
    entitles members to direct access to NI Applications Engineers
    via phone and email for one-to-one technical support, as well as
    exclusive access to eLearning training modules at ni.com/
    eLearning. NI offers complementary membership for a full year
    after purchase, after which you may renew to continue your
    benefits.

For information about other technical support options in your area, visit ni.com/services, or contact your local office at ni.com/contact.

- Training and Certification—Visit ni.com/training for self-paced training, eLearning virtual classrooms, interactive CDs, and Certification program information. You also can register for instructor-led, hands-on courses at locations around the world.
- System Integration—If you have time constraints, limited in-house technical resources, or other project challenges, National Instruments Alliance Partner members can help. To learn more, call your local NI office or visit ni.com/alliance.

You also can visit the Worldwide Offices section of ni.com/niglobal to access the branch office Web sites, which provide up-to-date contact information, support phone numbers, email addresses, and current events.

# **Glossary**

Symbol	Prefix	Value
p	pico	10-12
n	nano	10-9
μ	micro	10-6
m	milli	10-3
k	kilo	103
M	mega	106
G	giga	10°
T	tera	1012

# **Symbols**

° Degrees.

 $\geq$  Equal or greater than.

 $\leq$  Equal or less than.

% Percent.

 $\Omega$  Ohms.

A

A Amperes.

AC Alternating current.

ANSI American National Standards Institute.

AUTO Automatic fan speed control.

AWG American Wire Gauge.

В

backplane An assembly, typically a printed circuit board, with connectors and signal

paths that bus the connector pins.

BNC Bayonet Neill Concelman connector; a commonly used coaxial connector.

C

C Celsius.

cfm Cubic feet per minute.

CFR Code of Federal Regulations.

cm Centimeters.

CompactPCI An adaptation of the Peripheral Component Interconnect (PCI)

Specification 2.1 or later for industrial and/or embedded applications requiring a more robust mechanical form factor than desktop PCI. It uses

industry standard mechanical components and high-performance

connector technologies to provide an optimized system intended for rugged applications. It is electrically compatible with the PCI Specification, which enables low-cost PCI components to be utilized in a mechanical form factor

suited for rugged environments.

CSA Canadian Standards Association.

D

daisy-chain A method of propagating signals along a bus, in which the devices are

prioritized on the basis of their position on the bus.

DB-9 A 9-pin D-sub connector.

DC Direct current.

DoC Declaration of Conformity.

D-sub Subminiature D connector.

Ε

efficiency Ratio of output power to input power, expressed as a percentage.

EIA Electronic Industries Association.

EMC Electromagnetic Compatibility.

EMI Electromagnetic Interference.

Embedded system

controller

A module configured for installation in slot 1 of a PXI chassis. This device is unique in the PXI system in that it performs the system controller functions, including clock sourcing and arbitration for data transfers across the backplane. Installing such a device into any other slot can damage the

device, the PXI backplane, or both.

F

FCC Federal Communications Commission.

filler panel A blank module front panel used to fill empty slots in the chassis.

G

g (1) grams; (2) a measure of acceleration approximately equal to 9.8 m/s<sup>2</sup>.

GPIB General Purpose Interface Bus (IEEE 488).

g<sub>RMS</sub> A measure of random vibration. The root mean square of acceleration

levels in a random vibration test profile.

Н

hr Hours.

Hz Hertz; cycles per second.

ı

IEC International Electrotechnical Commission; an organization that sets

international electrical and electronics standards.

IEEE Institute of Electrical and Electronics Engineers.

I<sub>MP</sub> Mainframe peak current.

in. Inches.

inhibit To turn off.

J

jitter A measure of the small, rapid variations in clock transition times from their

nominal regular intervals. Units: seconds RMS.

K

kg Kilograms.

km Kilometers.

L

lb Pounds.

LED Light emitting diode.

line regulation The maximum steady-state percentage that a DC voltage output will

change as a result of a specified change in input AC voltage (step change

from 90 to 132 VAC or 180 to 264 VAC).

load regulation The maximum steady-state percentage that a DC voltage output will

change as a result of a step change from no-load to full-load output current.

M

m Meters.

MAX NI Measurement & Automation Explorer, the utility which allows you to

configure and test your PXI system.

MHz Megahertz. One million Hertz; one Hertz equals one cycle per second.

ms Millisecond. One thousandth of a second  $(10^{-3})$ .

MTBF Mean time between failure.

MTTR Mean time to repair.

N

NEMA National Electrical Manufacturers Association.

NI National Instruments.

NI-DAQmx National Instruments driver which controls the operation of National

Instruments data acquisition (DAQ) devices.

NI-VISA National Instruments' implementation of the VISA (Virtual Instrument

System Architecture) I/O standard. NI-VISA provides support for the

VISA API, and also provides VISAIC, a utility for instrument

configuration and I/O function execution.

ns Nanosecond, one billionth of a second  $(10^{-9})$ .

P

ppm Parts-per-million.

power-supply shuttle A removable module that contains the chassis power supply.

ps Picosecond, one trillionth of a second  $(10^{-12})$ .

PXI PCI eXtensions for Instrumentation. PXI is an implementation of

CompactPCI with added electrical features that meet the high performance requirements of instrumentation applications by providing triggering, local

buses, and system clock capabilities.

PXI\_CLK10 10 MHz PXI system reference clock.

R

RMS Root mean square.

S

s Seconds.

skew Deviation in signal transmission times.

slot blocker An assembly installed into an empty slot to improve the airflow in adjacent

slots.

ST Star trigger.

standby The backplane is unpowered (off), but the chassis is still connected to

AC power mains.

star trigger slot This slot is located at slot 2 and has a dedicated trigger line between each

peripheral slot. Use this slot for a module with ST functionality that can

A 10 MHz clock, also called PXI CLK10, that is distributed to all

provide individual triggers to all other peripherals.

system reference

clock

peripheral slots in the chassis, as well as a BNC connector on the rear of chassis labeled *10 MHz REF OUT*. The system reference clock can be used for synchronization of multiple modules in a measurement or control system. The 10 MHz REF IN and OUT BNC connectors on the rear of the chassis can be used to synchronize multiple chassis to one reference clock.

The PXI backplane specification defines implementation guidelines for

PXI CLK10.

Τ

TTL Transistor-transistor logic.

U

UL Underwriter's Laboratories.

V

V Volts.

VAC Volts alternating current, or  $V_{rms}$ .

 $V_{pp}$  Peak-to-peak voltage.

W

W Watts.

# Index

A	D
AC power cables (table), 1-2	diagnostic tools (NI resources), C-1
	dimensions (figure), A-9, A-10
n	documentation
В	conventions used in manual, vii
backplane	NI resources, C-1
interoperability with CompactPCI, 1-5	related documentation, viii
local bus, 1-6	drivers (NI resources), C-1
overview, 1-5	D-sub connector
peripheral slots, 1-6	pinout (table), 2-9
specifications, A-6	power supply voltages (table), 2-10
star trigger (ST) slot, 1-6	
system reference clock, 1-8	г
trigger bus, 1-8	E
	electromagnetic compatibility
C	specifications, A-4
	EMC filler panel kit, 1-4
cables, power (table), 1-2	environmental management specifications, A-5
CE compliance specifications, A-4	examples (NI resources), C-1
chassis initialization file, 2-14	
chassis number label (figure), 2-13	F
CLK10 rear connectors, 2-11	
CompactPCI	fan, setting speed, 2-3
installing modules (figure), 2-8	filler panel installation, 2-3
interoperability with PXI-1045	
backplane, 1-5	G
configuration. See installation, configuration,	
and operation	ground, connecting, 2-4
connector pinouts. See pinouts	
conventions used in the manual, vii	Н
cooling	help, technical support, C-1
air cooling of PXI-1045, 2-2	ncip, tecinical support, C 1
air intake (figure), 2-3	_
filler panel installation, 2-3	
setting fan speed, 2-3	installation, configuration, and operation
slot blocker installation, 2-3	chassis initialization file, 2-14
	configuration in MAX (figure), 2-12

connecting safety ground, 2-4	preparation, 3-1
filler panel installation, 2-3	resetting the AC mains circuit
installing a PXI controller, 2-5	breaker, 3-3
module installation, 2-6, 2-7	service interval, 3-1
CompactPCI or PXI modules	static discharge damage (caution), 3-1
(figure), 2-8	
injector/ejector handle position	M
(figure), 2-6	N
PXI configuration in MAX, 2-11	National Instruments support and
PXI trigger bus routing, 2-13	services, C-1
trigger configuration, 2-13	NI support and services, C-1
PXI controller installed in a PXI-1045	
chassis (figure), 2-7	0
rack mounting, 2-4	
remote voltage monitoring and inhibiting	online product certification, A-5
connector, 2-9	optional equipment, 1-4
setting fan speed, 2-3	
site considerations, 2-2	Р
slot blocker installation, 2-3	•
testing power up, 2-4	P1 (J1) connector
unpacking the PXI-1045, 1-1	peripheral slot (table), B-6
instrument drivers (NI resources), C-1	star trigger slot (table), B-4
interoperability with CompactPCI, 1-5	system controller slot (table), B-2
	P2 (J2) connector
V	peripheral slot (table), B-7
K	star trigger slot (table), B-5
key features, 1-2	system controller slot (table), B-3
kit contents, 1-1	peripheral slots
KnowledgeBase, C-1	overview, 1-6
	P1 (J1) connector pinouts (table), B-6
L	P2 (J2) connector pinouts (table), B-7
_	pinouts, B-1
local bus, routing (figure), 1-6, 1-7	D-sub connector (table), 2-9
	P1 (J1) connector
M	peripheral slot (table), B-6
	star trigger slot (table), B-4
maintenance of PXI-1045	system controller slot (table), B-2
cleaning	P2 (J2) connector
exterior cleaning, 3-2	peripheral slot (table), B-7
fan filters, 3-2	star trigger slot (table), B-5
interior cleaning, 3-2	system controller slot (table), B-3

power cables (table), 1-2	rack mounting, 2-4	
power supply	rack-mount kits, 1-4	
connecting to, 2-4	rear view of chassis, 1-4	
remote voltage monitoring and inhibiting connector, 2-9	safety ground, connecting, 2-4	
replacing	D	
configuration, 3-4	R	
connecting safety ground, 3-5	rack mount kit dimensions (figure), A-11	
connecting to power source, 3-5	rack mounting, 2-4	
installation, 3-4	rack-mount kits, 1-4	
removal, 3-4	related documentation, viii	
voltages at voltage monitoring connector	remote voltage monitoring and inhibiting	
(D-sub) (table), 2-9	connector	
power switch LED indicator, 2-8	pinout (table), 2-9	
power up, testing, 2-4	power supply voltages (table), 2-10	
programming examples (NI resources), C-1		
PXI controller, 2-5	S	
installing in a PXI-1045 chassis	-	
(figure), 2-7	safety	
PXI_CLK10, 1-8	specifications, A-4	
PXI_CLK10_IN pin, 1-8	safety and caution notices, 2-1	
PXI-1045	safety ground, connecting, 2-4	
backplane	service interval, 3-1	
interoperability with	setting fan speed, 2-3	
CompactPCI, 1-5	slot blocker	
local bus, 1-6	installation, 2-3	
overview, 1-5	kit, 1-4	
peripheral slots, 1-6	software (NI resources), C-1	
specifications, A-6	specifications	
star trigger (ST) slot, 1-6	backplane, A-6	
system reference clock, 1-8	CE compliance, A-4	
trigger bus, 1-8	chassis cooling, A-3	
cooling air intake (figure), 2-3	dimensions (figure), A-9, A-10	
fan speed, setting, 2-3	electrical	
front view (figure), 1-3	AC input, A-1	
installation. See installation,	DC output, A-2	
configuration, and operation	electromagnetic compatibility, A-4	
key features, 1-2	environmental, A-5	
maintenance. See maintenance of	environmental management, A-5	
PXI-1045	mechanical, A-8	
optional equipment, 1-4	online product certification, A-5	

rack mount kit dimensions (figure), A-11 safety, A-4
Waste Electrical and Electronic
Equipment (WEEE), A-5
star trigger (ST) slot
description, 1-6
P1 (J1) connector pinouts (table), B-4
P2 (J2) connector pinouts (table), B-5
support, technical, C-1
system controller slot
description, 1-5
P1 (J1) connector pinouts (table), B-2
P2 (J2) connector pinouts (table), B-3
system reference clock, 1-8

#### Т

technical support, C-1 testing power up, 2-4 training and certification (NI resources), C-1 trigger bus, 1-8 troubleshooting (NI resources), C-1

#### U

unpacking the PXI-1045, 1-1

#### V

voltage monitoring connector. See D-sub connector voltages at voltage monitoring connector (D-sub) (table), 2-10

#### W

Waste Electrical and Electronic Equipment (WEEE) specifications, A-5
Web resources, C-1